







## RTP 10i Lubrication Schedule

Part	Location	Image	Frequency	Type of Lubricant
Main Worm Gear	Mounted above the Motor in the lower section of the press		Visually inspect through the eye glass and apply when dry (approximately every 6 months).	WA 460 Oil (0.55 L)
Upper Roller Cam	Oil well with wick on the top of the machine		Visually inspect and apply when dry.	SAE 90 or NSF food grade equivalent
Upper Cam Shaft	Grease nipple located in the center of the Upper Roller Cam		Apply every 100 hours/once per week.	NLGI Grade 2
Lower Cam Shaft	Grease nipple located in the center of the Lower Roller Cam		Apply every 100 hours/once per week.	NLGI Grade 2

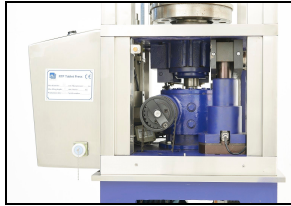